



## *Committed to Quality*

### Installation Instructions Corner Soap/Shampoo

#### **Recommended Tools and Supplies:**

1. 100% Silicone Adhesive
2. 3/16" Masonry Drill Bit
3. 3/8" Electric Drill
4. 2 1/2" x 1/8" #8 Phillips Head wood screws (2)

The Corner Soap and Shampoo accessory has been designed with an integral hook and separate cast bracket which allows it to be fitted into any 90 degree corner wall configuration—such as in a shower or above a bathtub.

Before actual installation, position the accessory to check for a true fit. An “out of square” wall condition may be compensated for by grinding the rear surfaces of the piece to achieve a flush fit.

The following instructions detail the correct procedure for obtaining a secure attachment of the hanger bracket and installation of the accessory.


### **Installation Steps:**

**Step 1:** Clean the wall surfaces with alcohol to remove any grease or wax residue that would prevent a good silicone bond where you want to position the corner soap and shampoo accessory.

**Step 2:** Using the recommended drill bit size, drill two holes in the center of the hanger bracket as show in the photo to the right.

**Step 3:** Position the hanger bracket in the corner of the shower where you want the corner soap and shampoo accessory will hang. Use the pre-drilled holes in the bracket as a guide, and drill through the wall panels **to** the wood studs. **DO NOT** drill into the wood studs.

Step 2

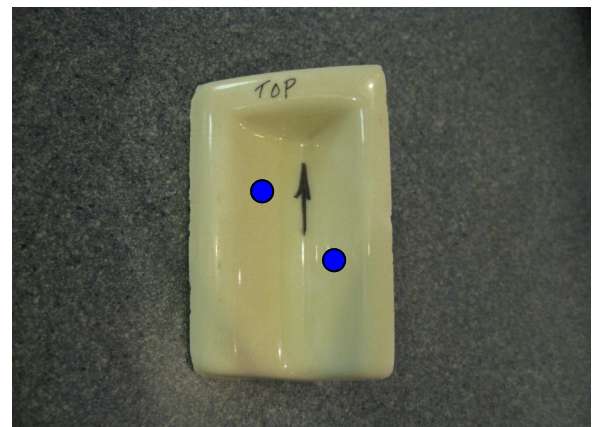

Turn over for further instructions ...

**Step 4:** Apply silicone adhesive to the back of the hanger and to the screw shafts. Reposition the hanger bracket, pressing it into the corner. Insert the screws through the bracket holes, into the panel holes, **into** the stud. **DO NOT** over tighten the screws, as this could damage the bracket.

**Step 5:** Wipe off any excess silicone ensuring that a waterproof seal is obtained. Make sure that the bracket is firmly attached and does not freely move when vertical or horizontal pressure is applied. This could take several hours for the silicone to seat and provide a strong seal.


**Step 6:** The corner soap and shampoo accessory can now be mounted onto the hanger bracket. Apply a bead of silicone to the back of the accessory, approximately 1" from all the edges. Also, apply a small amount of silicone on the top of the hanger bracket where the hanger bracket and the accessory meet. **Use restraint in the amount of silicone that is used. Too much silicone will not allow the accessory to seat to the wall.**

**Step 7:** To mount the accessory, simply set the accessory on top of the hanger and press into the wall. The design of the system will allow the two pieces to grasp each other without effort. **DO NOT put an excessive amount of force on the hanger when the holder is being mounted as it can cause the mounting bracket to become loose or even break.**

**Step 8:** Remove any excess silicone squeezed out during installation, making sure that a complete waterproof seal is maintained. The finished installation should be allowed to cure and set for several hours before actual use.

If you need any further assistance or instruction, please feel free to contact our Installation Specialist at 989-561-2293, Monday through Friday, 8 a.m.—5 p.m. (EST)

**Step 4**

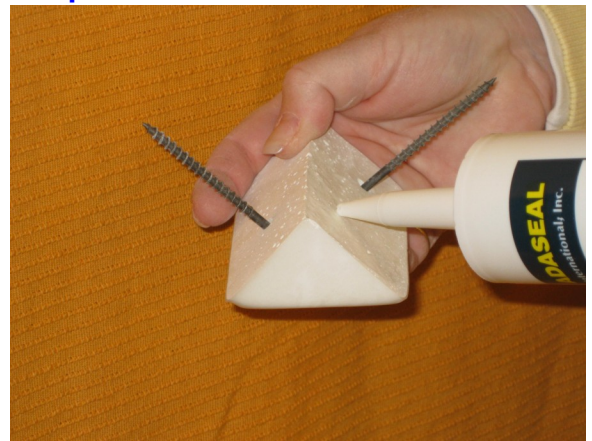

**Step 6**



**Step 7**

